


BUN DISPLAY : **DO NOT clean with Windex, Alcohol or Ammonia**

**DO NOT TIGHT THE SCREWS RIGHT AWAY,  
WAIT UNTIL YOU SET UP THE UNIT ALL TOGETHER**

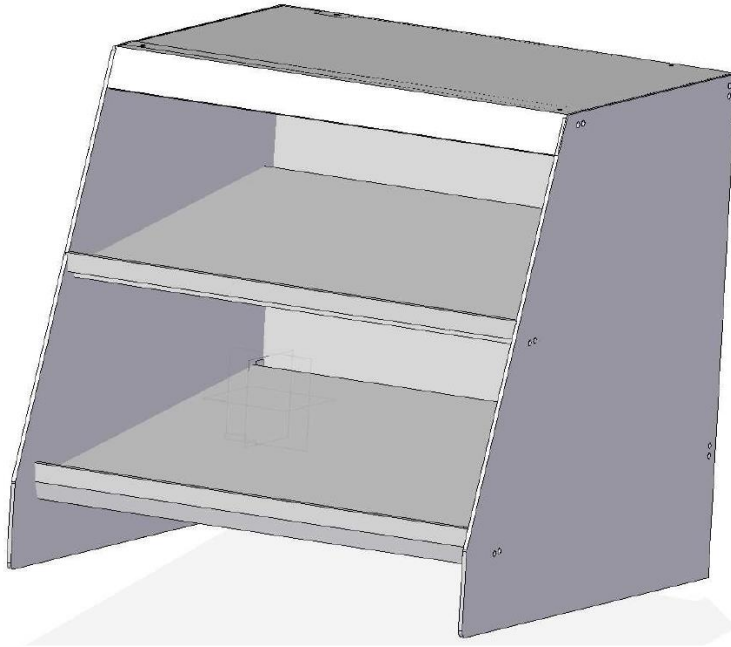


**CAVEAT: WHILE MOUNTING, KEEP THE PANELS SQUARE**


You received: 1/ 1 back panel


- 2/ 1 left side panel with electric elements
- 3/ 1 right side panel
- 4/ 1 bottom light fixture (no electric element)
- 5/ 1 middle light fixture
- 6/ 1 top light fixture
- 7/ 1 top cover
- 8/ 1 bottom shelves (bigger one)
- 9/ 1 top shelves (smaller one)
- 10/ 21 18-8 stainless steel Binding Barrels and Screws
- 11/ 5 screws 3/32

12/ 1 electric plug


**STEP 1** : attach the back and the left side (with electric) together using the big 18-8 barrels and

screws  You need 4 for this step.

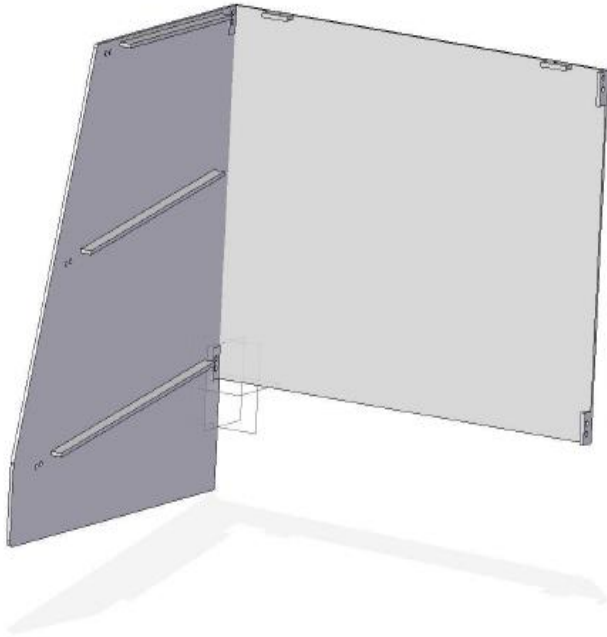


**STEP 2:** attach the right side to the back using the big 18-8 barrels and screws  You

need 4 for this step.

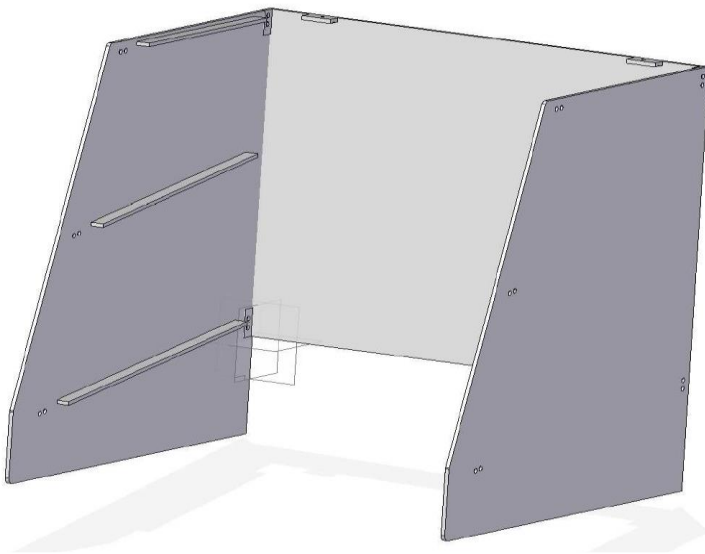

**Step 3:** attach the white light fixture without electric on the bottom using the big 18-8 barrels .

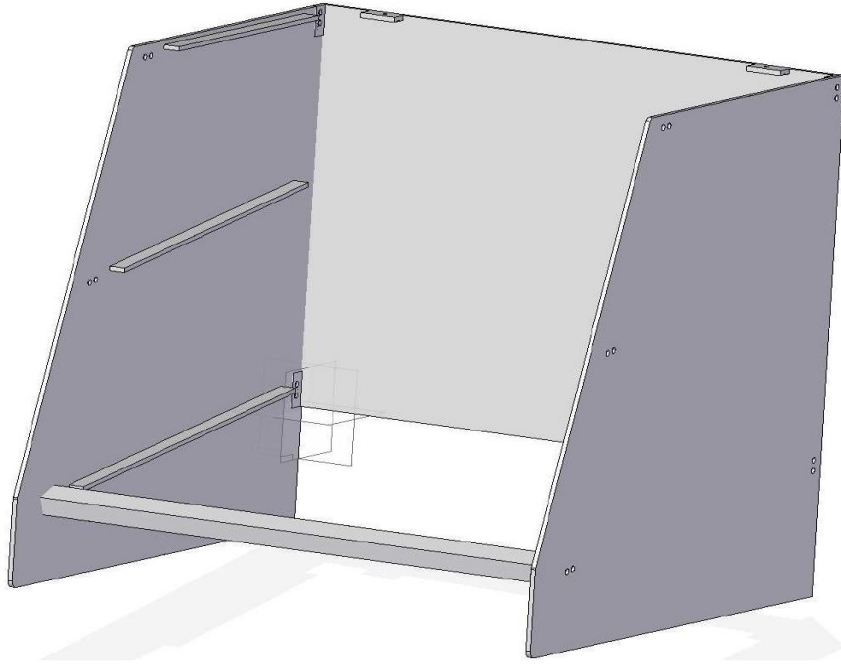

and screws



You need 4 for this step.


**Step 4:** attach the middle white light fixture with electric on the middle front using the big 18-8

barrels and screws. This fixture DOES NOT HAVE HOLES on the top.




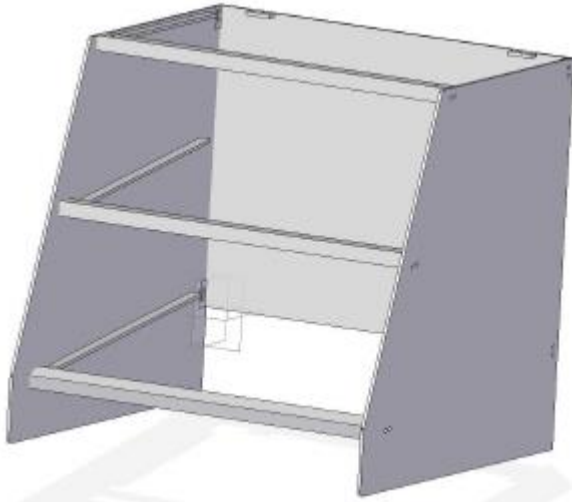
You need 4 for

this step. You need to plug the electrical plug in the left side panel plug. Hear the little click.

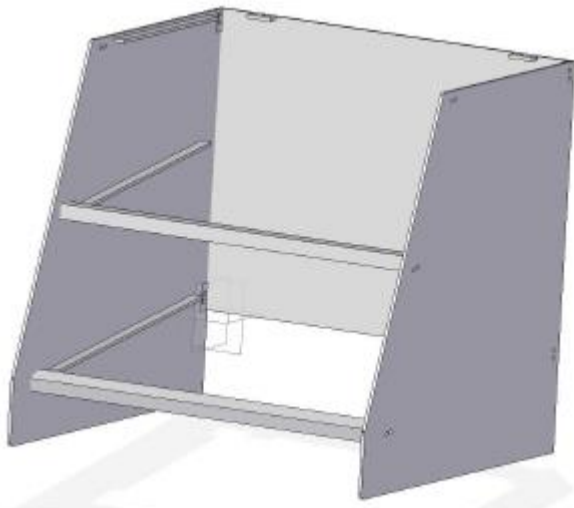


**Step 5:** attach the top white light fixture with electric on the top front using the big 18-8 barrels

and screws. This fixture DOES HAVE TWO HOLES on the top.  You need 4 for this step. You need to plug the electrical plug in the left side panel plug. Hear the little



click.

**Step 6:** attach the top cover and use the 4 3/32 screws to attach it

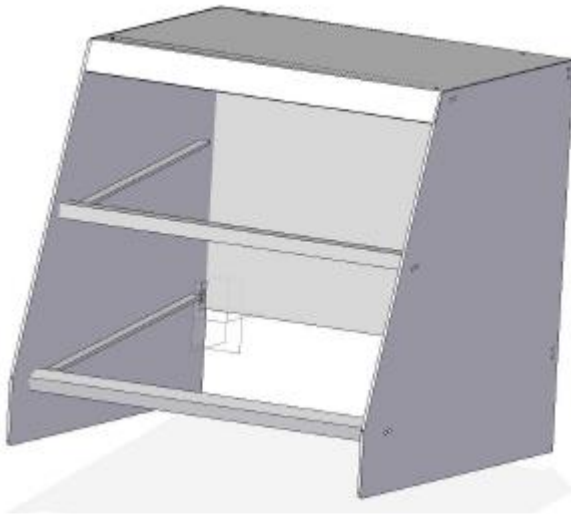

**Step 7:** you can slide the 2 shelves, the smaller one on the top. And you plug the electrical plug on the back of the unit NEVER CLEAN THE UNIT WITH ALCOHOL, WINDEX OR AMONAC. Clean only with soap and water.

In case of trouble or question, call 602 340 1236 at Desert Star Plastics and ask for Tanguy

## **Warranty information:**

Desert Star Plastics guarantees the Bun Display against any manufacturing problem.

The electric parts are guarantee for one year with a normal usage. We cannot guarantee power surge from your electrical supplier.

The plastic part (acrylic) is guarantee for one year with normal usage. We cannot guarantee the breakage due to misuse of the display. Acrylic is breakable and also, the use of alcohol, ammoniac or "Windex like" product will crease the plastic (microscopic crack) and therefore fragile the display.

**You need to inspect the package upon arrival to be sure there is no damage. If you see a problem, call us, take pictures and save the packaging.**

Also, be aware that if one of your customers breaks a part, you can buy the replacement part and not the whole unit.

Electrical troubleshooting: if the lights are not working

1/ double check that the outlet is powered by electricity. Switch with a working outlet

2/ the electrical need to be connected: be sure the plug and the connector are correctly connected

3/ if only one of the 2 lights is working: switch them to see. And let us know